


Wireless Outdoor Sound Alarm And LED Flashing Light Siren MD-327R

Product Introduction

MD-327R, It is a highly versatile alarm device, integrated with Meian alarm host to use through wireless way. supporting the use of voice can be achieved luminous alarm function, Play the role of treble for help and deter. With anti-tamper function, the appearance of novelty, beautiful, sound loud, suitable for installation in corridors, doors and windows, family residential, office, factory, store and other places.

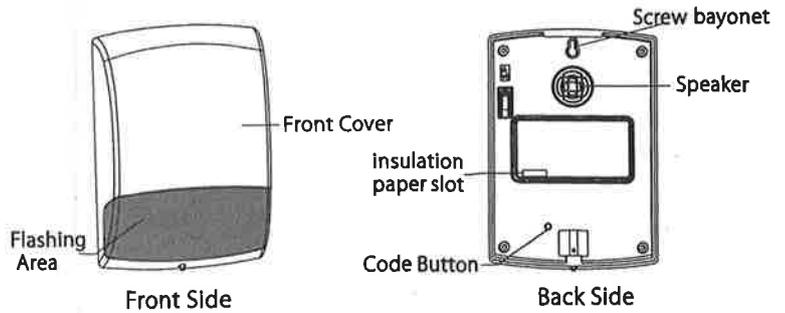

Specification

Item No. : MD-327R

Alarm Sound: about 100dB

Static consumption current: $\leq 0.8\text{mA}$


R/T distance: $\leq 80\text{m}$ (in the clearing)

Voltage: 6V

alarming current: $\leq 500\text{mA}$

Receiving and transmitting frequency: 433MHz/868MHz


Installation

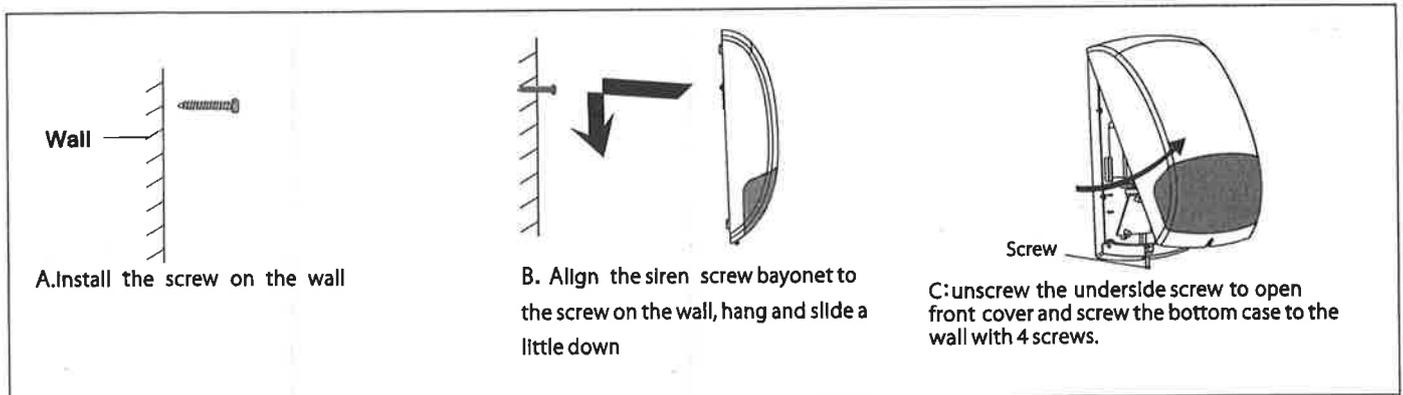

Battery Replacement

When the panel receive the low battery report from siren, please change the battery.

1. Open the front cover through unscrew the screw
2. Unscrew the battery cover and pick out of the battery
3. Install 4pcs Lr20 battery (D size) according to the correct polarity
4. Install the battery cover and screw the screw

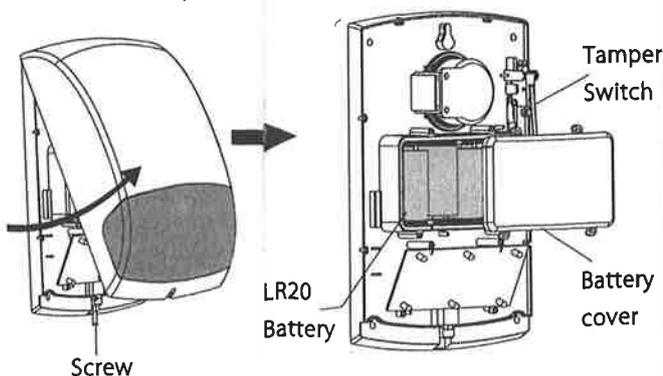

Match Code

Host code mode: set the host in the code mode, and then Press and hold the learning button on the back (long press about 5 seconds), the code lights in the Flashing state, when you hear the host prompts the success of the code, that is the code successful, release button.

Wireless device code: hold down the learning button on the back (Long press about 5 seconds), the lights on the flashing state, and then trigger the wireless device of the code key (some are tamper switch) when hear the siren sound that is the code is successful, release the button.

Clear the code: continuous press on the back of the learning button 3 times (about 1 second each time) Signal indicator light for about 3 seconds long, and then flash for about 10 seconds to continue long bright, The siren has cleared all the code, release the button.